

PDU Fitility for mass FW upgrade

Catalog


- SNMP firmware upgrade
- Inlet/ Outlet firmware upgrade
- Trouble shooting
- SNMP firmware upgrade
 - 1. Select same type of PDU then click Upgrade icon on left hand side for firmware upgrade

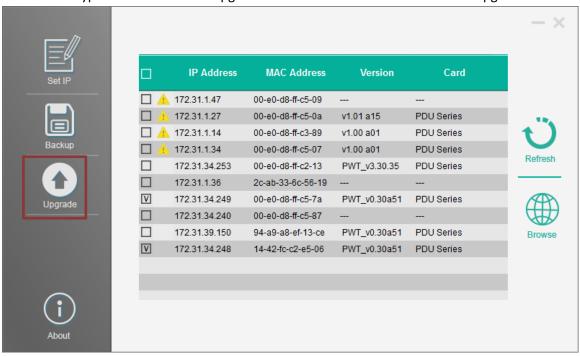


2. Checked "Submit All" and input user name & password, then press Enter, and click Next button

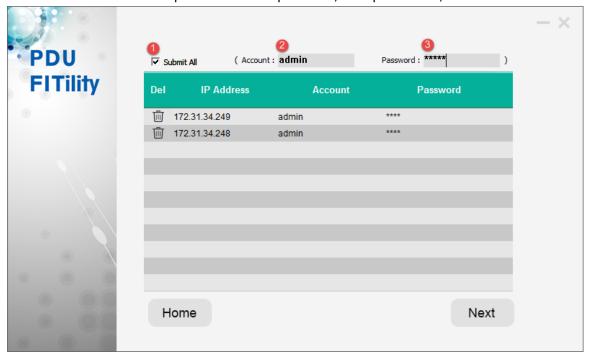


3. Select the firmware file

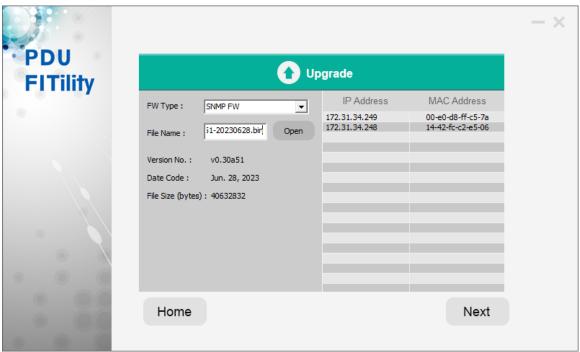

4. Click Continue to go ahead firmware upgrade

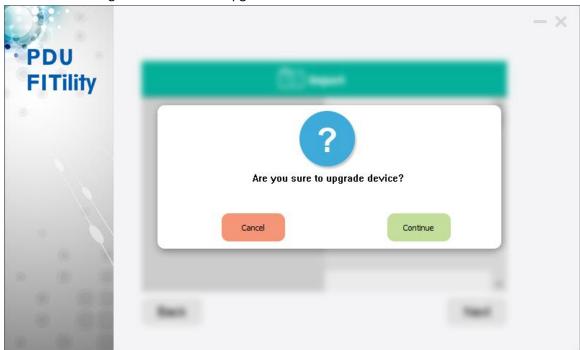

5. Then you can see the process bar moving

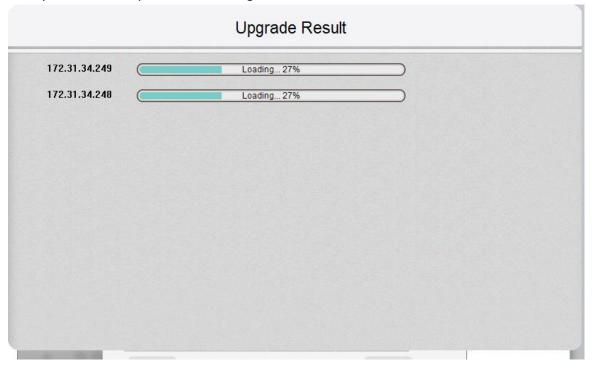


6. Done




• Inlet/ Outlet firmware upgrade


1. Select the PDU you want to do firmware upgrade, then click Upgrade icon

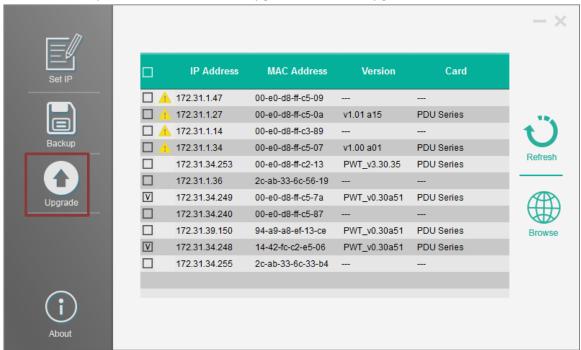


2. Input the user name and password

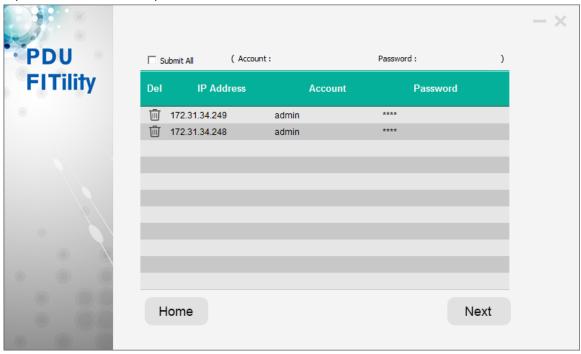


3. Select "FW Type" to Inlet/Outlet/EMD31, then select the firmware file

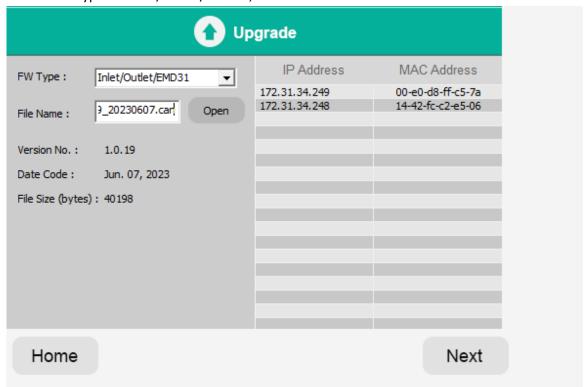

Select file type to Can file

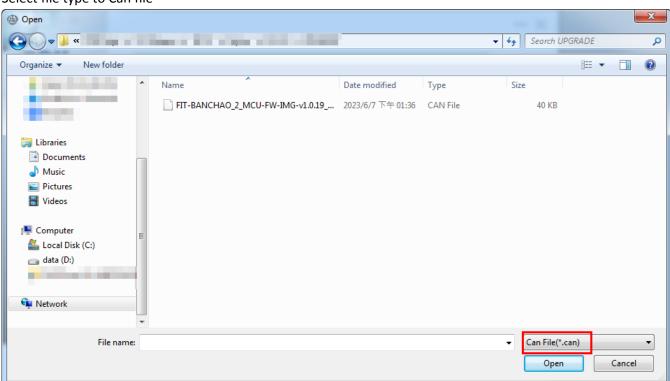

4. Click Continue to go ahead upgrade

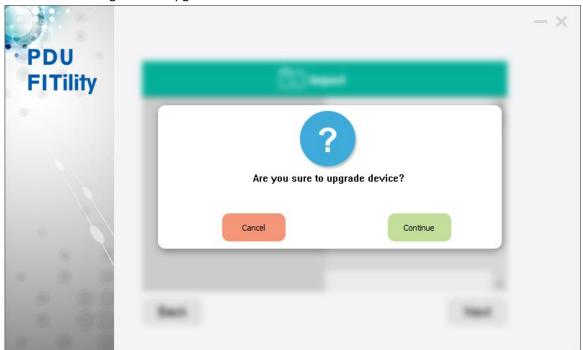

5. You can see the upgrade progress bar is moving It will upgrade the inlet/outlet board on slave PDU automatically if connected.


IP Address	Produce Type	PDU Type	BoardType / Address	FW Ver.	FW Upload (%)	Upgrade Progress (%)	Status	Dev Ver.
2.31.34.249	PDU II	PDU(M)	Outlet(A1)	1.0.19	100	30	Busy	1.0.21
2.31.34.248	PDU II	PDU(M)	Outlet(A1)	1.0.19	100	25	Busy	1.0.21


You can see success if it finished.

IP Address	Produce Type	PDU Type	BoardType / Address	FW Ver.	FW Upload (%)	Upgrade Progress (%)	Status	Dev Ver.
72.31.34.249	PDU II	PDU(M)	Outlet(A2)	1.0.19	100	100		1.0.19
72.31.34.248	PDU II	PDU(M)	Outlet(A3)	1.0.19	100	100		1.0.19

Trouble shooting

1. You can click the yellow triangle icon to check more information if job failed

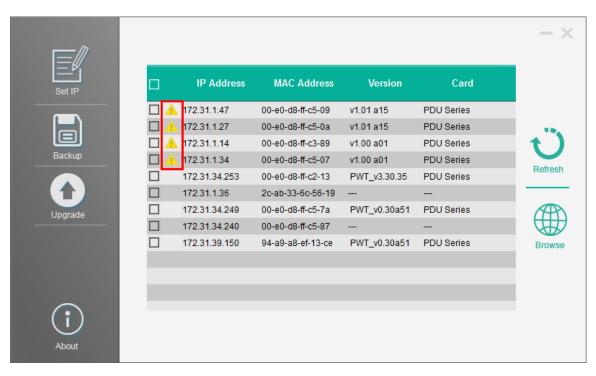

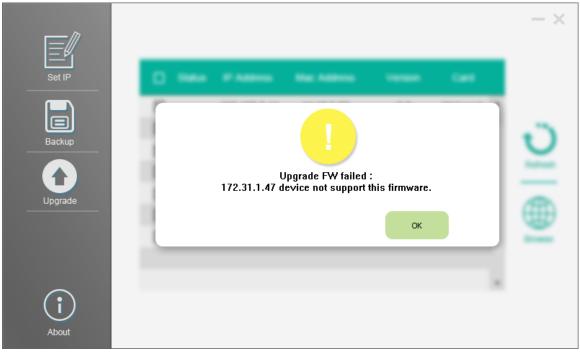

2. Mass firmware upgrade should select the same type of PDU

